

MB945

**Socket LGA775
Intel® Q45 Chipset
Industrial Motherboard**

USER'S MANUAL

Version 1.0A

Acknowledgments

Award is a registered trademark of Award Software International, Inc.

PS/2 is a trademark of International Business Machines Corporation.

Intel is a registered trademark of Intel Corporation.

Microsoft Windows is a registered trademark of Microsoft Corporation.

Winbond is a registered trademark of Winbond Electronics Corporation.

All other product names or trademarks are properties of their respective owners.

Table of Contents

Introduction	1
Checklist.....	1
Product Description.....	2
Specifications.....	3
Board Dimensions	4
Installations	5
Installing the CPU	6
ATX Power Installation	7
Installing the Memory	8
Setting the Jumpers	9
Connectors on MB945	14
BIOS Setup	27
Drivers Installation	49
Intel Chipset Software Installation Utility	50
Intel Graphics Driver Installation	52
Realtek HD Codec Audio Driver Installation	54
LAN Drivers Installation.....	56
Intel Matrix Storage Manager Driver.....	58
Intel Management Engine Interface	60
Intel Active Management Technology.....	62
Appendix.....	67
A. I/O Port Address Map	67
B. Interrupt Request Lines (IRQ).....	68
C. Watchdog Timer Configuration	69

Ordering Information:

Model	ICH	SATA	Intel LANPHY	PCI-E Gigabit LAN
MB945	ICH10DO	6	82567LM	N/A
MB945F	ICH10DO	6	82567LM	PCI-E GbE (Intel82574L)

NOTE FOR SATA AHCI and RAID DRIVER

- 1. Assuming the drivers DVD is in D drive, the path for the relevant files is D:\SataRaid\ICH10DO***
- 2. During Windows XP installation, press F6 and note the file path for driver installation.***

NOTE FOR iAMT

- 1. Assuming the drivers DVD is in D drive, the path for the iAMT files is in D:\Intel\Q45\iAMT\iAMT5.0***
- 2. This note only applies if you are using the MB945AF motherboard.***

Introduction

Checklist

Your MB945 motherboard package should include the items listed below:

- The MB945 motherboard
- This User's manual
- 1 Back I/O shield
- 1 IDE cable
- 1 Floppy cable
- 1 SATA cable
- 1 Serial-Port cable
- 1 CD containing the following:
 - Chipset Drivers
 - Flash Memory Utility

Product Description

The MB945 LGA 775 motherboard incorporates the Intel Q45 chipset that utilizes a single LGA775 processor and supports 800/1066/1333MT/s (200/266/333 MHz) FSB.

The Q45 chipset is designed for use with the Core 2 processor family, including a faster 1333 MHz system bus. The integrated GMCH component provides the CPU interface, DDR3 interface, Hub Interface and PCI Express graphics interface.

Four DDR3 memory sockets support DDR3 800/1066 SDRAM DIMM modules of up to 16GB in capacity.


The board is designed with an Intel 82567LM Gigabit Ethernet PHY and an optional Intel 82574LM PCI Express Gigabit Ethernet. Six Serial-II ATA connectors offer 3Gb/s data throughput speed - faster than the most advanced parallel ATA.

Expansion includes four PCI slots, one PCI Express x1 and one PCI Express x16 and one ISA slot. Other advanced features include twelve USB 2.0 ports, IrDA interface, digital I/O, four serial ports, watchdog timer and audio function. Dimensions of the board are 12" by 9.5" in an ATX form factor.

Specifications

Product Name	MB945
Form Factor	ATX
CPU Type	Intel® Core™2 Duo Processor E8000 and E7000 series Intel® Core™2 Quad Processor Q9000 series Intel® Core™2 Extreme Processor QX9000 series
CPU Speed	Up to 3.0 GHz or higher
CPU FSB	800/1066/1333MHz FSB
L2 Cache	Up to 12MB
Green /APM	APM1.2
CPU Socket	LGA775
Chipset	Intel Eaglelake:Q45 + ICH10DO Chipset GMCH : AC82Q45, 34mm x 34mm, 1254-pin FC-BGA ICH10DO: AF82801JDO, 31mm x 31mm, 676-pin mBGA
BIOS	Award BIOS, support ACPI Function
Memory	DDRIII 800/1066MHz - DIMM x 4 (w/o ECC), Max. 16GB
VGA	Q45 built-in Intel gen.5.0 Graphics Media Accelerator , supports DirectX10 (Vista), Integrated DP, DVI, VGA SDVO; Dual Independent Display
LAN	1. ICH10DO Gigabit MAC + PHY: <ul style="list-style-type: none"> • Intel 82567LM Gigabit Ethernet PHY 2. Intel 82574L PCI-e Gigabit LAN controller x1 (MB945F)
USB	ICH10DO built-in USB 2.0 host controller, supports 12 ports
Serial ATA	ICH10DO built-in SATA controller, supports 6 ports
Parallel IDE/ CF	- JMicron JM368 (PCI-e to PATA) x1 for 1 PATA channel for IDE & CF: IDE 40 pin and vertical CF socket x 1
Audio	ICH10DO built-in HD Audio controller: ALC888 w/ 7.1 channels
LPC I/O	Winbond W83627DHG: IrDA x1, COM1 (RS232), COM2 (RS232/422/485), Hardware monitor (3 thermal inputs, 4 voltage monitor inputs, VID0-4 & 2 Fan Headers) - Fintek 81216G for COM 3. COM4
Digital IO	4 in & 4 out
TPM1.2	ICH10DO built-in iTPM version1.2 controller by firmware
Keyboard/Mouse	Supports PS/2 Keyboard/Mouse connector
Expansion Slots	PCI slot x4, PCI-e (x1) slot x1 and PCI-e (x16) slot x1, ISA slot x1
Edge Connector	PS/2 Connector x1 for keyboard/mouse Gigabit LAN RJ-45 + dual USB stack connector x2 DB9 + DB15 stack connector x1 for COM 1 & VGA DB25 connector x1 for SPP/ECP/EPP RCA Jack 3x2 for HD Audio
Onboard Header/Connector	40-pin box-header x1 for IDE 34-pin box-header x1 for FDD SATA connector x6 for 6 ports SATA/SATAII CF connector x1 for CF Card 2x5-pin pin-header x4 for 8 ports USB 2x5-pin pin-header x1 for front panel audio 2x5-pin pin-header x3 for COM2/3/4 2x5-pin pin-header x1 for Digital IO
Watchdog Timer	Yes (256 segments, 0, 1, 2...255 sec/min)
System Voltage	+5V, +3.3V, +12V, -12V, 5VSB (2A)
Other	LAN Wakeup
RoHS	Yes
Board Size	305mm x 244mm (12" x 9.5")

Board Dimensions

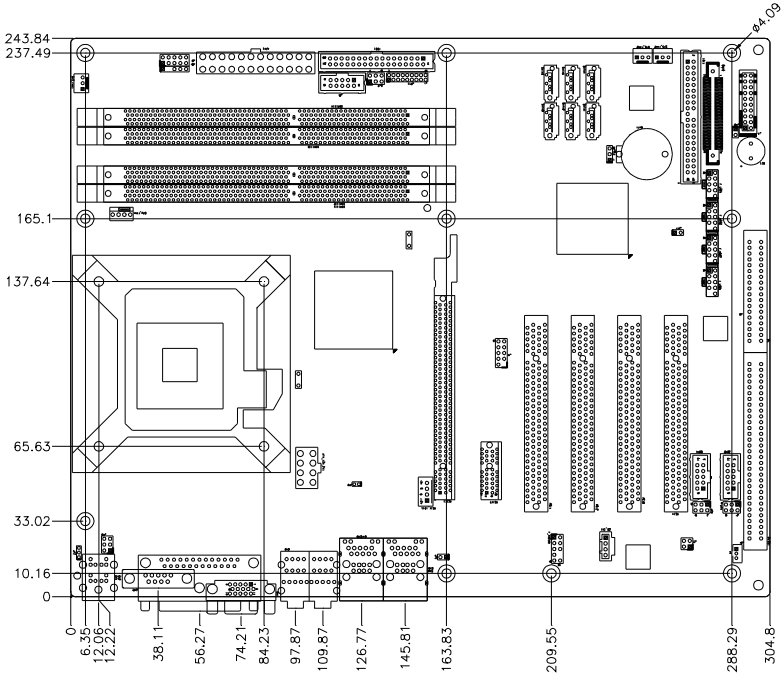

Installations


This section provides information on how to use the jumpers and connectors on the MB945/MB945F in order to set up a workable system. The topics covered are:

Installing the CPU.....	6
ATX Power Installation.....	7
Installing the Memory.....	8
Setting the Jumpers.....	9
Connectors on MB945.....	14

Installing the CPU

The MB945 motherboard supports an LGA 775 processor socket for Intel Core 2 Duo and Intel Core2 Quad processors.

The LGA 775 processor socket comes with a lever to secure the processor. Refer to the pictures below, from left to right, on how to place the processor into the CPU socket. ***Please note that the cover of the LGA775 socket must always be installed during transport to avoid damage to the socket.***

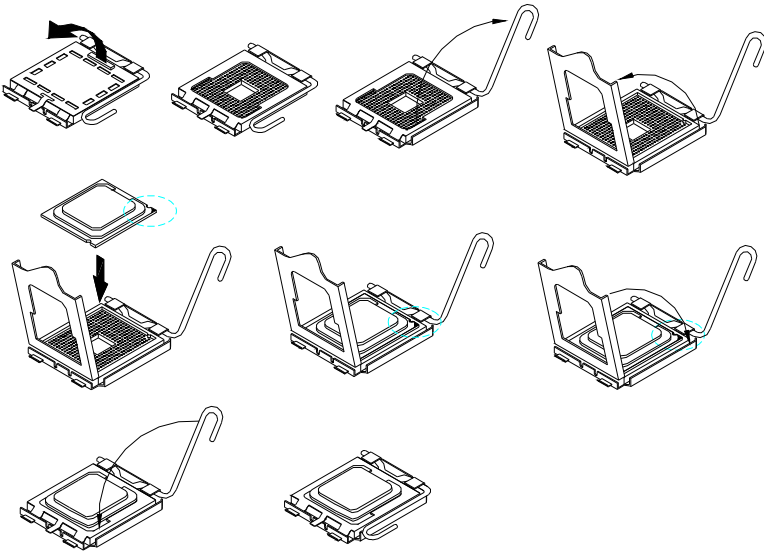

ATX Power Installation

The system power is provided to the motherboard with the ATX1 and ATX_12V_2X1 power connectors. ATX1 is a 24-pin power connector and ATX_12V_2X1 is a 8-pin 12V power connector.

The 24-pin power connector can to be connected to a standard 20-pin ATX power connector in a standard ATX power supply (Min. 400watt).

Note: The power supply 5VSB voltage must be at least 2A.

Installing the Memory

The MB945 motherboard supports four DDR3 memory sockets for a maximum total memory of 16GB in DDR memory type. It supports DDR3 800/1066.

Basically, the system memory interface has the following features:

- Supports two 64-bit wide DDR data channels
- Available bandwidth up to 6.4GB/s (DDR3 800) for single-channel mode and 12.8GB/s (DDR3 800) in dual-channel mode.
- Supports 512Mb, 1Gb DDR3 technologies.
- Supports only x8, x16, DDR3 devices with four banks
- Supports only unbuffered DIMMs
- Supports opportunistic refresh
- Up to 32 simultaneously open pages (four per row, four rows maximum)

Dual Channel Memory Configuration

If you want to operate the Dual Channel Technology, please note the following explanations due to the limitation of Intel chipset specifications.

1. Dual Channel mode will not be enabled if only one DDR II memory module is installed.
2. To enable Dual Channel mode with two or four memory modules (it is recommended to use memory modules of identical brand, size, chips, and speed), you must install them into DIMM sockets of the same color.

The following is a Dual Channel Memory configuration table:


(DS: Double Side, SS: Single Side)

	DDRIII1	DDRIII2	DDRIII3	DDRIII4
2Memory Modules	DS/SS	X	DS/SS	X
	X	DS/SS	X	DS/SS
4Memory Modules	DS/SS	DS/SS	DS/SS	DS/SS

Setting the Jumpers



Jumpers are used on MB945/MB945F to select various settings and features according to your needs and applications. Contact your supplier if you have doubts about the best configuration for your needs. The following lists the connectors on MB945/MB945F and their respective functions.

JP2: PS/2 Keyboard & Mouse Power Setting.....	11
JP3 COM1 RS232 +5V/+12V Power Setting.....	11
JP4: COM4 RS232 +5V/+12V Power Setting.....	11
JP5: COM3 RS232 +5V/+12V Power Setting.....	11
JP7: ME (Management Engine) – Disabled / pin closed	12
JP8: Clear CMOS Contents	12
JP9: Compact Flash Socket Master/Slave Setting.....	12
JP10: COM2 RS232 +5V/+12V Power Setting.....	12
JP11: RS232/422/485 (COM2) Selection.....	13
JP6: Gigabit LAN (Intel 574L) Setting.....	13

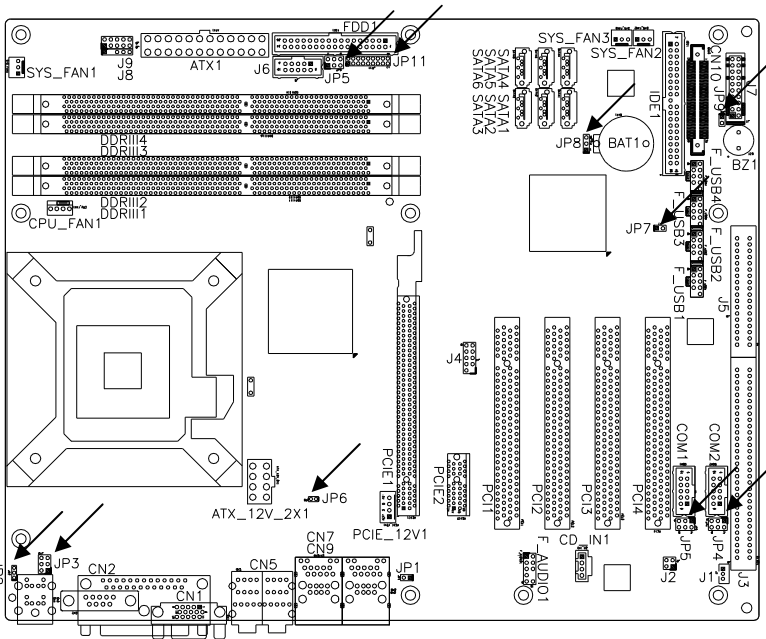


Jumper Locations	Page
JP2: PS/2 Keyboard & Mouse Power Setting	11
JP3 COM1 RS232 +5V/+12V Power Setting	11
JP4: COM4 RS232 +5V/+12V Power Setting	11
JP5: COM3 RS232 +5V/+12V Power Setting	11
JP7: ME (Management Engine) – Disabled / pin closed.....	12
JP8: Clear CMOS Contents.....	12
JP9: Compact Flash Socket Master/Slave Setting.....	12
JP10: COM2 RS232 +5V/+12V Power Setting	12
JP11: RS232/422/485 (COM2) Selection	13
JP6: Gigabit LAN (Intel 574L) Setting	13

  
JP2: PS/2 Keyboard & Mouse Power Setting

JP5	Setting	Function
	Pin 1-2 Short/Closed	+5V
	Pin 2-3 Short/Closed	+5VSB

 
JP3: COM1 RS232 +5V/+12V Power Setting

JP3	Setting	Function
	Pin 1-2 Short/Closed	+12V
	Pin 3-4 Short/Closed	Normal
	Pin 5-6 Short/Closed	+5V

 JP4: COM4 RS232 +5V/+12V Power Setting

JP4	Setting	Function
	Pin 1-2 Short/Closed	+12V
	Pin 3-4 Short/Closed	Normal
	Pin 5-6 Short/Closed	+5V

 JP5: COM3 RS232 +5V/+12V Power Setting

JP5	Setting	Function
	Pin 1-2 Short/Closed	+12V
	Pin 3-4 Short/Closed	Normal
	Pin 5-6 Short/Closed	+5V



INSTALLATIONS

JP7: ME (Management Engine) – Disabled / pin closed



The factory default setting of the 2-pin JP7 jumper is closed. This means the management engine function is disabled.

  JP8: Clear CMOS Contents


Use JP8, a 3-pin header, to clear the CMOS contents. Note that the ATX-power connector should be disconnected from the motherboard before clearing CMOS.

JP8	Setting	Function
	Pin 1-2 Short/Closed	Normal
	Pin 2-3 Short/Closed	Clear CMOS

JP9: Compact Flash Socket Master/Slave Setting

JP9	Compact Flash
 Short	Master
 Open	Slave

 JP10: COM2 RS232 +5V/+12V Power Setting

JP10	Setting	Function
	Pin 1-2 Short/Closed	+12V
	Pin 3-4 Short/Closed	Normal
	Pin 5-6 Short/Closed	+5V

JP11: RS232/422/485 (COM2) Selection

COM1 is fixed for RS-232 use only.

COM2 is selectable for RS232, RS-422 and RS-485.

The following table describes the jumper settings for COM2 selection.



COM2 Function	RS-232	RS-422	RS-485
Jumper Setting (pin closed)	Short: 1-2	Short: 3-4	Short: 5-6
	9-11	7-9	7-9
	10-12	8-10	8-10
	15-17	13-15	13-15
	16-18	14-16	14-16

Note: Factory is default RS-232


JP6: Gigabit LAN (Intel 574L) Setting

JP6	Function
 Short	Disable
 Open	Enable

Connectors on MB945

The connectors on MB945 allows you to connect external devices such as keyboard, floppy disk drives, hard disk drives, printers, etc.

ATX1: 24-pin ATX Power Connector	16
ATX_12V_2X1: ATX 12V Power Connector	16
DDRIII1, DDRIII 3: Channel A DDR3 Socket	17
DDRIII2, DDRIII 4: Channel B DDR3 Socket	17
CN1: VGA CRT Connector.....	17
CN2: Parallel Port Connector.....	17
CN3: Serial Ports(COM1)	18
CN4: PS/2 Keyboard and PS/2 Mouse Connectors	18
CN5: HD Audio Connector	18
CN8: Gigabit LAN (Intel 567LM) RJ-45&USB 4/5 Connector.....	18
CN9: Gigabit LAN (Intel 574L) RJ-45 &USB 10/11 Connector	18
CN10: Compact Flash Type II Socket.....	18
IDE1: Primary IDE Connectors.....	19
SATA1~SATA6: SATAII Connectors	19
CD_IN1: CD-In Audio Connector	19
COM3,COM4: COM3, COM4 Serial Ports(RS232).....	20
J1: Wake On LAN Connector.....	20
J2: SPDIFI/ SPDIFO Connector (Reserved)	20
J3, J5: ISA Slots	20
J4: SPI Debug Tools Port (Factory use only)	20
J6: COM2 Serial Port	21
J7: System Function Connector	21
J8: IrDA Connector	23
J9: Digital I/O Connector (4 in, 4 out).....	23
F_AUDIO1: Audio Front Header	23
F_USB1: USB8/USB9 Connector.....	24
F_USB2: USB6/USB7 Connector.....	24
F_USB3: USB2/USB3 Connector.....	24
F_USB4: USB0/USB1 Connector.....	24
CPU_FAN1: CPU Fan Power Connector.....	24
SYS_FAN1: system Fan1 Power Connector	24
SYS_FAN3: SYSTEM Fan2 Power Connector	24
FDD1: Floppy Drive Connector	25
PCIE1: x16 PCI Express Slot.....	25
PCIE2: x1 PCI Express Slots	25
PCI1, PCI2, PCI3, PCI4: PCI Slots.....	25

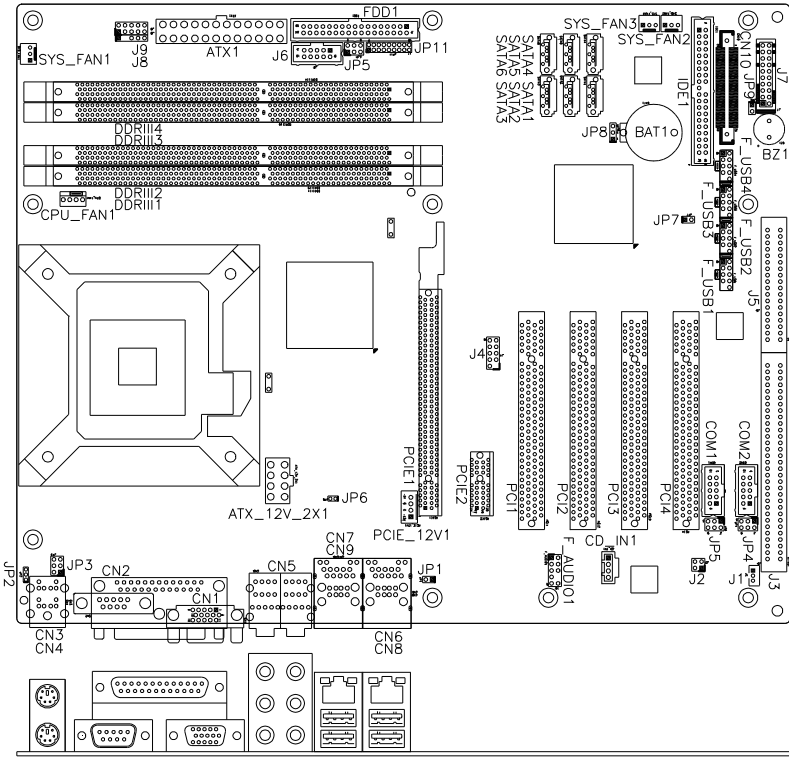


Connectors on MB945/MB945F


- | | |
|--|---|
| ATX1: 24-pin ATX Power Connector | J2: SPDIFI/ SPDIF0 Connector (Reserved) |
| ATX_12V_2X1: ATX 12V Power Connector | J3, J5: ISA Slots |
| DDRIII1, DDRIII 3: Channel A DDR3 Socket | J4: SPI Debug Tools Port (Factory use only) |
| DDRIII2, DDRIII 4: Channel B DDR3 Socket | J6: COM2 Serial Port |
| CN1: VGA CRT Connector | J7: System Function Connector |
| CN2: Parallel Port Connector | J8: IrDA Connector |
| CN3: Serial Ports(COM1) | J9: Digital I/O Connector (4 in, 4 out) |
| CN4: PS/2 Keyboard and PS/2 Mouse | F_AUDIO1: Audio Front Header |
| CN5: HD Audio Connector | F_USB1: USB8/USB9 Connector |
| CN8: Gigabit LAN (Intel 567LM) RJ-45&USB 4/5 | F_USB2: USB6/USB7 Connector |
| CN9: Gigabit LAN (Intel 574L) RJ-45 &USB 10/11 Connector | F_USB3: USB2/USB3 Connector |
| CN10: Compact Flash Type II Socket | F_USB4: USB0/USB1 Connector |
| IDE1: Primary IDE Connectors | CPU_FAN1: CPU Fan Power Connector |
| SATA1-SATA6: SATAII Connectors | SYS_FAN1: system Fan1 Power Connector |
| CD_IN1: CD-In Audio Connector | SYS_FAN3: SYSTEM Fan2 Power Connector |
| COM3,COM4: COM3, COM4 Serial Ports | FDD1: Floppy Drive Connector |
| J1: Wake On LAN Connector | PCI1: x16 PCI Express Slot |
| | PCI2: x1 PCI Express Slots |
| | PCI1, PCI2, PCI3, PCI4: PCI Slots |

INSTALLATIONS


MB945 Edge Connectors

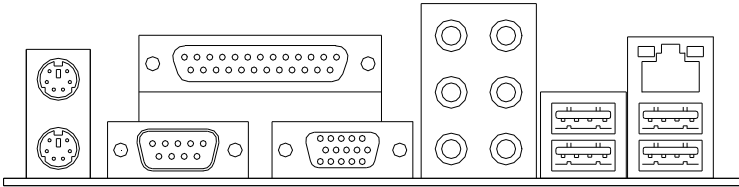

MB945F Edge Connectors

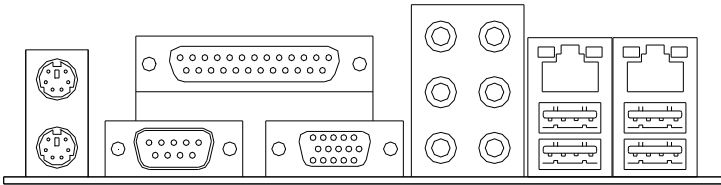


ATX1: 24-pin ATX Power Connector

 

Signal Name	Pin #	Pin #	Signal Name
3.3V	13	1	3.3V
-12V	14	2	3.3V
Ground	15	3	Ground
PS-ON	16	4	+5V
Ground	17	5	Ground
Ground	18	6	+5V
Ground	19	7	Ground
-5V	20	8	Power good
+5V	21	9	5VSB
+5V	22	10	+12V
+5V	23	11	+12V
Ground	24	12	+3.3V

ATX_12V_2X1: ATX 12V Power Connector

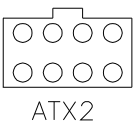

Signal Name	Pin #	Pin #	Signal Name
+12V	5	1	Ground
+12V	6	2	Ground
+12V	7	3	Ground
+12V	8	4	Ground

DDRIII1, DDRIII 3: Channel A DDR3 Socket


DDRIII1 and DDRIII 3 are the first-channel DDR3 sockets.

DDRIII2, DDRIII 4: Channel B DDR3 Socket

DDRIII2 and DDRIII 4 are the second-channel DDR3 sockets.

CN1: VGA CRT Connector

 
CN1 is a DB-15 VGA connector located beside the COM1 port. The following table shows the pin-out assignments of this connector.



Signal Name	Pin #	Pin #	Signal Name
Red	1	2	Green
Blue	3	4	N.C.
GND	5	6	GND
GND	7	8	GND
VCC	9	10	GND
N.C.	11	12	DDCDATA
HSYNC	13	14	VSYNC
DDCCLK	15		

CN2: Parallel Port Connector

 CN2 is a DB-25 external connector situated on top of the VGA and serial ports.




CN2 Parallel Port

Signal Name	Pin #	Pin #	Signal Name
Line printer strobe	1	14	AutoFeed
PD0, parallel data 0	2	15	Error
PD1, parallel data 1	3	16	Initialize
PD2, parallel data 2	4	17	Select
PD3, parallel data 3	5	18	Ground
PD4, parallel data 4	6	19	Ground
PD5, parallel data 5	7	20	Ground
PD6, parallel data 6	8	21	Ground
PD7, parallel data 7	9	22	Ground
ACK, acknowledge	10	23	Ground
Busy	11	24	Ground
Paper empty	12	25	Ground
Select	13	N/A	N/A

INSTALLATIONS

CN3: Serial Ports(COM1)


CN3 (COM1) is a DB-9 connector, while J6, COM3 and COM4 are COM pin-header connectors.

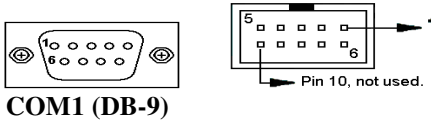

COM1 (DB-9)

Signal Name	Pin #	Pin #	Signal Name
DCD, Data carrier detect	1	6	DSR, Data set ready
RXD, Receive data	2	7	RTS, Request to send
TXD, Transmit data	3	8	CTS, Clear to send
DTR, Data terminal ready	4	9	RI, Ring indicator
GND, ground	5	10	Not Used

 
CN4: PS/2 Keyboard and PS/2 Mouse Connectors



Mouse (top)
Keyboard (bottom)

Keyboard Signal	Pin #	Mouse Signal
Keyboard data	1	Mouse data
N.C.	2	N.C.
GND	3	GND
5V	4	5V
Keyboard clock	5	Mouse clock
N.C.	6	N.C.

CN5: HD Audio Connector

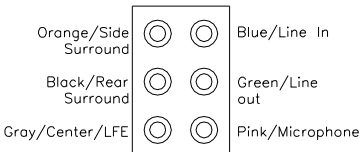


CN8: Gigabit LAN (Intel 567LM) RJ-45&USB 4/5 Connector

CN9: Gigabit LAN (Intel 574L) RJ-45 &USB 10/11 Connector

CN10: Compact Flash Type II Socket

Note: The CompactFlash interface cannot be used simultaneously with the IDE interface.

 IDE1: Primary IDE Connectors




Signal Name	Pin #	Pin #	Signal Name
Reset IDE	1	2	Ground
Host data 7	3	4	Host data 8
Host data 6	5	6	Host data 9
Host data 5	7	8	Host data 10
Host data 4	9	10	Host data 11
Host data 3	11	12	Host data 12
Host data 2	13	14	Host data 13
Host data 1	15	16	Host data 14
Host data 0	17	18	Host data 15
Ground	19	20	Protect pin
DRQ0	21	22	Ground
Host IOW	23	24	Ground
Host IOR	25	26	Ground
IOCHRDY	27	28	Host ALE
DACK0	29	30	Ground
IRQ14	31	32	No connect
Address 1	33	34	No connect
Address 0	35	36	Address 2
Chip select 0	37	38	Chip select 1
Activity	39	40	Ground

Note: The CompactFlash interface cannot be used simultaneously with the IDE interface.

SATA1~SATA6: SATAII Connectors

Pin #	Signal Name
1	Ground
2	TX+
3	TX-
4	Ground
5	RX-
6	RX+
7	Ground

CD_IN1: CD-In Audio Connector




Pin #	Signal Name
1	CD Audio R
2	Ground
3	Ground
4	CD Audio L

INSTALLATIONS

COM3,COM4: COM3, COM4 Serial Ports(RS232)

 
COM3 and COM4 are COM pin-header connectors.



Signal Name	Pin #	Pin #	Signal Name
DCD, Data carrier detect	1	6	DSR, Data set ready
RXD, Receive data	2	7	RTS, Request to send
TXD, Transmit data	3	8	CTS, Clear to send
DTR, Data terminal ready	4	9	RI, Ring indicator
GND, ground	5	10	Not Used


J1: Wake On LAN Connector

 J1 is a 3-pin header for the Wake On LAN function on the motherboard. The following table shows the pin out assignments of this connector. Wake On LAN will function properly only with an ATX power supply with 5VSB that has 1A.



Pin #	Signal Name
1	+5VSB
2	Ground
3	LAN Wakeup

 J2: SPDIFI/ SPDIFO Connector (Reserved)



Pin #	Signal Name
1	SPDIF/I
2	Ground
3	SPDIF/O
4	Ground

 
J3, J5: ISA Slots

ISA slot does not support ISA master & DMA access function, but only ISA peripheral cards.

J4: SPI Debug Tools Port (Factory use only)

J6: COM2 Serial Port

COM2 is jumper selectable for RS-232, RS-422 and RS-485.




Please refer to JP11: RS232/422/485 (COM2) Selection

Pin #	Signal Name		
	RS-232	R2-422	RS-485
1	DCD	TX-	DATA-
2	RX	TX+	DATA+
3	TX	RX+	NC
4	DTR	RX-	NC
5	Ground	Ground	Ground
6	DSR	RTS-	NC
7	RTS	RTS+	NC
8	CTS	CTS+	NC
9	RI	CTS-	NC
10	NC	NC	NC


J7: System Function Connector

J7 provides connectors for system indicators that provide light indication of the computer activities and switches to change the computer status.

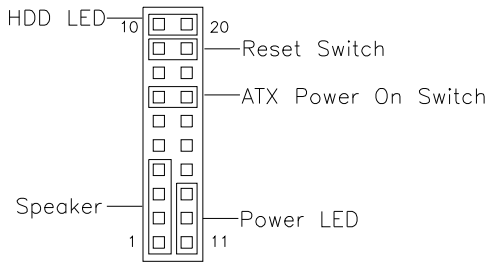

Speaker: Pins 1 - 4

 
This connector provides an interface to a speaker for audio tone generation. An 8-ohm speaker is recommended.



Pin #	Signal Name
1	Speaker out
2	No connect
3	Ground
4	+5V

Power LED: Pins 11 - 13

 
The power LED indicates the status of the main power switch.



Pin #	Signal Name
11	Power LED
12	No connect
13	Ground


ATX Power ON Switch: Pins 7 and 17

 This 2-pin connector is an “ATX Power Supply On/Off Switch” on the system that connects to the power switch on the case. When pressed, the power switch will force the system to power on. When pressed again, it will force the system to power off.




Reset Switch: Pins 9 and 19

 The reset switch allows the user to reset the system without turning the main power switch off and then on again. Orientation is not required when making a connection to this header.




Hard Disk Drive LED Connector: Pins 10 and 20

 This connector connects to the hard drive activity LED on control panel. This LED will flash when the HDD is being accessed.



Pin #	Signal Name
10	HDD Active
20	5V

J8: IrDA Connector

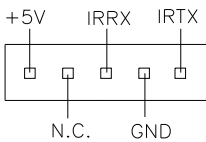

Pin #	Signal Name
1	+5V
2	No connect
3	Ir RX
4	Ground
5	Ir TX

J9: Digital I/O Connector (4 in, 4 out)

This 10-pin digital I/O connector supports TTL levels and is used to control external devices requiring ON/OFF circuitry.

A diagram of a 10-pin connector. The pins are arranged in two columns of 5. The left column is numbered 1 to 5 from top to bottom. The right column is numbered 2 to 10 from top to bottom. Pin 1 in the left column is highlighted with a black square.

Signal Name	Pin #	Pin #	Signal Name
Ground	1	2	+5V
Out3	3	4	Out1
Out2	5	6	Out0
IN3	7	8	IN1
IN2	9	10	IN0

F_AUDIO1: Audio Front Header

A diagram of a 10-pin connector. The pins are arranged in two columns of 5. The left column is numbered 1 to 5 from top to bottom. The right column is numbered 2 to 10 from top to bottom. Pin 1 in the left column is highlighted with a black square.

Signal Name	Pin #	Pin #	Signal Name
MIC2_L	1	2	Ground
MIC2_R	3	4	Presence#
Line2_R	5	6	MIC2_ID
Sense	7	8	NC
Line2_L	9	10	Line2_ID

INSTALLATIONS


F_USB1: USB8/USB9 Connector

F_USB2: USB6/USB7 Connector

F_USB3: USB2/USB3 Connector


F_USB4: USB0/USB1 Connector

The following table shows the pin outs of the USB pin header.

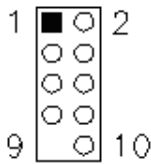


Signal Name	Pin	Pin	Signal Name
+5V	1	2	+5V
USBD0-	3	4	USBD1-
USBD0+	5	6	USBD1+
Ground	7	8	Ground
Key pin	9	10	NC

 CPU_FAN1: CPU Fan Power Connector




Pin #	Signal Name
1	Ground
2	+12V
3	Rotation detection
4	Control

 SYS_FAN1: system Fan1 Power Connector




Pin #	Signal Name
1	Ground
2	+12V
3	Rotation detection

 SYS_FAN3: SYSTEM Fan2 Power Connector



Pin #	Signal Name
1	Ground
2	+12V
3	Rotation detection

 FDD1: Floppy Drive Connector



Signal Name	Pin #	Pin #	Signal Name
Ground	1	2	RM/LC
Ground	3	4	No connect
Ground	5	6	No connect
Ground	7	8	Index
Ground	9	10	Motor enable 0
Ground	11	12	Drive select 1
Ground	13	14	Drive select 0
Ground	15	16	Motor enable 1
Ground	17	18	Direction
Ground	19	20	Step
Ground	21	22	Write data
Ground	23	24	Write gate
Ground	25	26	Track 00
Ground	27	28	Write protect
Ground	29	30	Read data
Ground	31	32	Side 1 select
Ground	33	34	Diskette change

PCIE1: x16 PCI Express Slot

PCIE2: x1 PCI Express Slots

PCI1, PCI2, PCI3, PCI4: PCI Slots

This page is intentionally left blank.

BIOS Setup

This chapter describes the different settings available in the Award BIOS that comes with the board. The topics covered in this chapter are as follows:

BIOS Introduction	28
BIOS Setup	28
Standard CMOS Setup	30
Advanced BIOS Features	33
Advanced Chipset Features	36
Power Management Setup	42
PNP/PCI Configurations.....	45
PC Health Status	46
Frequency/Voltage Control	47
Load Fail-Safe Defaults	48
Load Optimized Defaults.....	48
Set Supervisor/User Password	48
Save & Exit Setup.....	48
Exit Without Saving	48

BIOS Introduction

The Award BIOS (Basic Input/Output System) installed in your computer system's ROM supports Intel processors. The BIOS provides critical low-level support for a standard device such as disk drives, serial ports and parallel ports. It also adds virus and password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

BIOS Setup

The Award BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the Award BIOS is immediately activated. Pressing the key immediately allows you to enter the Setup utility. If you are a little bit late pressing the key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup. If you still wish to enter Setup, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system Off and back On again. The following message will appear on the screen:

```
Press <DEL> to Enter Setup
```

In general, you press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help and <Esc> to quit.

When you enter the Setup utility, the Main Menu screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.

Phoenix - AwardBIOS CMOS Setup Utility

Standard CMOS Features	Frequency/Voltage Control
Advanced BIOS Features	Load Fail-Safe Defaults
Advanced Chipset Features	Load Optimized Defaults
Integrated Peripherals	Set Supervisor Password
Power Management Setup	Set User Password
PnP/PCI Configurations	Save & Exit Setup
PC Health Status	Exit Without Saving
ESC : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	
Time, Date, Hard Disk Type...	

The section below the setup items of the Main Menu displays the control keys for this menu. At the bottom of the Main Menu just below the control keys section, there is another section, which displays information on the currently highlighted item in the list.

Note: *If the system cannot boot after making and saving system changes with Setup, the Award BIOS supports an override to the CMOS settings that resets your system to its default.*

Warning: *It is strongly recommended that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both Award and your system manufacturer to provide the absolute maximum performance and reliability. Changing the defaults could cause the system to become unstable and crash in some cases.*

Standard CMOS Setup

“Standard CMOS Setup” choice allows you to record some basic hardware configurations in your computer system and set the system clock and error handling. If the motherboard is already installed in a working system, you will not need to select this option. You will need to run the Standard CMOS option, however, if you change your system hardware configurations, the onboard battery fails, or the configuration stored in the CMOS memory was lost or damaged.

Phoenix - AwardBIOS CMOS Setup Utility
Standard CMOS Features

		Item Help
Date (mm:dd:yy)	Wed, Oct 3, 2007	Menu Level >
Time (hh:mm:ss)	16 : 11 : 00	
IDE Channel 0 Master	None	Change the day, month, Year and century
IDE Channel 0 Slave	None	
IDE Channel 1 Master	None	
IDE Channel 1 Slave	None	
IDE Channel 2 Master	None	
IDE Channel 3 Master	None	
IDE Channel 4 Master	None	
IDE Channel 4 Slave	None	
Drive A	1.44M, 3.5 in.	
Drive B	None	
Video	EGA/VGA	
Halt On	All, but keyboard	
Base Memory	640K	
Extended Memory	2086912K	
Total Memory	2087936K	

At the bottom of the menu are the control keys for use on this menu. If you need any help in each item field, you can press the <F1> key. It will display the relevant information to help you. The memory display at the lower right-hand side of the menu is read-only. It will adjust automatically according to the memory changed. The following describes each item of this menu.

Date

The date format is:

Day : Sun to Sat
Month : 1 to 12
Date : 1 to 31
Year : 1999 to 2099

To set the date, highlight the “Date” field and use the PageUp/ PageDown or +/- keys to set the current time.

Time

The time format is: **Hour** : 00 to 23
 Minute : 00 to 59
 Second : 00 to 59

To set the time, highlight the “Time” field and use the <PgUp>/ <PgDn> or +/- keys to set the current time.

IDE Channel Master/Slave

MB945 with ICH10DO supports 6 Serial ATA connectors; MB945series boards with JMicron controller support 1 CF and 1 IDE connectors.

The onboard Serial ATA connectors provide Primary and Secondary channels for connecting up to four Serial ATA hard disks . Each channel can support up to two hard disks; the first is the “Master” and the second is the “Slave”.

Press <Enter> to configure the hard disk. The selections include Auto, Manual, and None. Select ‘Manual’ to define the drive information manually. You will be asked to enter the following items.

Capacity : Capacity/size of the hard disk drive
Cylinder : Number of cylinders
Head : Number of read/write heads
Precomp : Write precompensation
Landing Zone : Landing zone
Sector : Number of sectors

The Access Mode selections are as follows:

CHS (HD < 528MB)
LBA (HD > 528MB and supports Logical Block Addressing)
Large (for MS-DOS only)
Auto

Drive A / Drive B

These fields identify the types of floppy disk drive A or drive B that has been installed in the computer. The available specifications are:

360KB	1.2MB	720KB	1.44MB	2.88MB
5.25 in.	5.25 in.	3.5 in.	3.5 in.	3.5 in.

Video

This field selects the type of video display card installed in your system.

You can choose the following video display cards:

EGA/VGA	For EGA, VGA, SEGA, SVGA or PGA monitor adapters. (default)
CGA 40	Power up in 40 column mode.
CGA 80	Power up in 80 column mode.
MONO	For Hercules or MDA adapters.

Halt On

This field determines whether or not the system will halt if an error is detected during power up.

No errors	The system boot will not be halted for any error that may be detected.
All errors	Whenever the BIOS detects a non-fatal error, the system will stop and you will be prompted.
All, But Keyboard	The system boot will not be halted for a keyboard error; it will stop for all other errors
All, But Diskette	The system boot will not be halted for a disk error; it will stop for all other errors.
All, But Disk/Key	The system boot will not be halted for a keyboard or disk error; it will stop for all others.

Advanced BIOS Features

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Phoenix - AwardBIOS CMOS Setup Utility
Advanced BIOS Features

CPU Feature	Press Enter	ITEM HELP
Hard Disk Boot Priority	Press Enter	
Virus Warning	Disabled	Menu Level >
CPU L3 Cache	Enabled	
Quick Power On Self Test	Enabled	
First Boot Device	Floppy	
Second Boot Device	Hard Disk	
Third Boot Device	CDROM	
Boot Other Device	Enabled	
Swap Floppy Drive	Disabled	
Boot Up Floppy Seek	Disabled	
Boot Up NumLock Status	On	
Gate A20 Option	Fast	
Typematic Rate Setting	Disabled	
Typematic Rate (Chars/Sec)	6	
Typematic Delay (Msec)	250	
Security Option	Setup	
APIC Mode	Enabled	
MPS Version Control for OS	1.4	
OS Select For DRAM>64MB	Non-OS2	
Console Redirection	Disabled	
Baud Rate	19200	
Agent after boot	Enabled	
Small Logo (EPA) Show	Disabled	

CPU Feature

Press Enter to configure the settings relevant to CPU Feature.

Hard Disk Boot Priority

With the field, there is the option to choose, aside from the hard disks connected, “Bootable add-in Cards” which refers to other external devices.

CPU L3 Cache

This feature is enabled.

Removable Device Priority

Press Enter to configure the device priority order.

Virus Warning

If this option is enabled, an alarm message will be displayed when trying to write on the boot sector or on the partition table on the disk, which is typical of the virus.

Quick Power On Self Test

When enabled, this field speeds up the Power On Self Test (POST) after the system is turned on. If it is set to *Enabled*, BIOS will skip some items.

First/Second/Third Boot Device

These fields determine the drive that the system searches first for an operating system. The options available include *Removable*, *Hard Disk*, *CDROM*, *Legacy LAN* and *Disabled*.

Boot Other Device

These fields allow the system to search for an OS from other devices other than the ones selected in the First/Second/Third Boot Device.

Swap Floppy Drive

This item allows you to determine whether or not to enable Swap Floppy Drive. When enabled, the BIOS swaps floppy drive assignments so that Drive A becomes Drive B, and Drive B becomes Drive A. By default, this field is set to *Disabled*.

Boot Up Floppy Seek

This feature controls whether the BIOS checks for a floppy drive while booting up. If it cannot detect one (either due to improper configuration or its absence), it will flash an error message.

Boot Up NumLock Status

This allows you to activate the NumLock function after you power up the system.

Gate A20 Option

This field allows you to select how Gate A20 is worked. Gate A20 is a device used to address memory above 1 MB.

Typematic Rate Setting

When disabled, continually holding down a key on your keyboard will generate only one instance. When enabled, you can set the two typematic controls listed next. By default, this field is set to *Disabled*.

Typematic Rate (Chars/Sec)

When the typematic rate is enabled, the system registers repeated keystrokes speeds. Settings are from 6 to 30 characters per second.

Typematic Delay (Msec)

When the typematic rate is enabled, this item allows you to set the time interval for displaying the first and second characters. By default, this item is set to *250msec*.

Security Option

This field allows you to limit access to the System and Setup. The default value is *Setup*. When you select *System*, the system prompts for the User Password every time you boot up. When you select *Setup*, the system always boots up and prompts for the Supervisor Password only when the Setup utility is called up.

APIC Mode

APIC stands for Advanced Programmable Interrupt Controller. The default setting is *Enabled*.

MPS Version Control for OS

This option specifies the MPS (Multiprocessor Specification) version for the OS. MPS version 1.4 added extended configuration tables to improve support for multiple PCI bus configurations and improve future expandability. The default setting is *1.4*.

OS Select for DRAM > 64MB

This option allows the system to access greater than 64MB of DRAM memory when used with OS/2 that depends on certain BIOS calls to access memory. The default setting is *Non-OS/2*.

Small Logo (EPA) Show

The EPA logo appears at the right side of the monitor screen when the system is boot up. The default setting is *Disabled*.

Console Redirection

This configuration is supported only with MB945AF (with iAMT function). The default setting is *Disabled*.

Baud Rate

This configuration is supported only with MB945AF (with iAMT function). The default setting is *19200*.

Agent after boot

This configuration is supported only with MB945AF (with iAMT function). The default setting is *Enabled*.

Advanced Chipset Features

This Setup menu controls the configuration of the chipset.

Phoenix - AwardBIOS CMOS Setup Utility
Advanced Chipset Features

System BIOS Cacheable	Enabled	ITEM HELP
Memory Hole at 15M-16M	Disabled	
PCI Express Root Port Func	Press Enter	Menu Level >
Disable MCHBAR MMIO	Enabled	
VT-d	Disabled	
Intel AMT Configuration	Press Enter	
** VGA Setting **		
PEG/On Chip VGA Control	Auto	
On-Chip Frame Buffer Size	32MB	
DVMT Mode	Enabled	
DVMT/FIXED memory Size	256MB	
PAVP Mode	Lite	
SDVO Device Setting	None	
SDVO LVDS Protocol	1 Ch 18bit	
SDVO Panel Number	640 x 480	
Boot Display	CRT	

Phoenix - AwardBIOS CMOS Setup Utility
Intel AMT Configuration

AMT BIOS Support	Enabled	ITEM HELP
SOL Support	Enabled	
IDE-R Support	Enabled	Menu Level >
Platform Mng Selection	Intel AMT	
QST Support	Disabled	
Danbury Technology	Disabled	
OEM Flag BIT0	Disabled	
OEM Flag BIT1	Disabled	
OEM Flag BIT2	Disabled	

System BIOS Cacheable

The setting of *Enabled* allows caching of the system BIOS ROM at F000h-FFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result.

Memory Hole At 15M-16M

In order to improve performance, certain space in memory can be reserved for ISA cards. This memory must be mapped into the memory space below 16 MB. The choices are *Enabled* and *Disabled*.

PCI Express Root Port Func

Press Enter to configure this field.

Disable MCHBAR MMIO

By default, this feature is enabled.

VT-d

By default, this feature is disabled.

Intel AMT Configuration

This configuration is supported only with MB945AF (with iAMT function).

VGA Setting

The fields under the On-Chip VGA Setting and their default settings are:

PEG/On Chip VGA Control: Auto

On-Chip Frame Buffer Size: 32MB

DVMT Mode: Enabled

DVMT/FIXED memory Size: 256MB

PAVP Mode: Lite

SDVO Device Setting: None

SDVO LVDS Protocol: 1 Ch 18bit

SDVO Panel Number: 640 x 480

Boot Display: CRT

Integrated Peripherals

This section sets configurations for your hard disk and other integrated peripherals. The first screen shows three main items for user to select. Once an item selected, a submenu appears. Details follow.

Phoenix - AwardBIOS CMOS Setup Utility
Integrated Peripherals

OnChip IDE Device	Press Enter	ITEM HELP
Onboard Device	Press Enter	Menu Level >
SuperIO Device	Press Enter	
2 nd SuperIO Device	Press Enter	
USB Device Setting	Press Enter	

Phoenix - AwardBIOS CMOS Setup Utility
OnChip IDE Device

IDE HDD Block Mode	Enabled	ITEM HELP
IDE DMA transfer access	Enabled	Menu Level >
IDE Primary Master PIO	Auto	
IDE Primary Slave PIO	Auto	
IDE Primary Master UDMA	Auto	
IDE Primary Slave UDMA	Auto	
On-Chip Secondary PCI IDE	Enabled	
IDE Secondary Master PIO	Auto	
IDE Secondary Slave PIO	Auto	
IDE Secondary Master UDMA	Auto	
IDE Secondary Slave UDMA	Auto	
SATA Mode	IDE	
LEGACY Mode Support	Enabled	

Phoenix - AwardBIOS CMOS Setup Utility
Onboard Device

High Definition Audio	Enabled	ITEM HELP
Onboard LAN Boot ROM	Disabled	

Phoenix - AwardBIOS CMOS Setup Utility
SuperIO Device

Onboard FDC Controller	Enabled	ITEM HELP
Onboard Serial Port 1	3F8/IRQ4	Menu Level >
Onboard Serial Port 2	2F8/IRQ3	
UART Mode Select	Normal	
RxD , TxD Active	Hi, Lo	
IR Transmission Delay	Enabled	
UR2 Duplex Mode	Half	
Use IR Pins	IR-Rx2Tx2	
Onboard Parallel Port	378/IRQ7	
Parallel Port Mode	SPP	
EPP Mode Select	EPP1.7	
ECP Mode Use DMA	3	
PWRON After PWR-Fail	Off	

Phoenix - AwardBIOS CMOS Setup Utility
2nd Super IO Device

Onboard Serial Port 3	Disabled	ITEM HELP
Serial Port 3 Use IRQ	IRQ11	Menu Level >
Onboard Serial Port 4	Disabled	
Serial Port 4 Use IRQ	IRQ10	

Phoenix - AwardBIOS CMOS Setup Utility
USB Device Setting

USB 1.0 Controller	Enabled	ITEM HELP
USB 2.0 Controller	Enabled	Menu Level >
USB Operation Mode	High Speed	
USB Keyboard Function	Enabled	
USB Mouse Function	Enabled	
USB Storage Function	Enabled	
*** USB Mass Storage Device Boot Setting ***		

IDE HDD Block Mode

This field allows your hard disk controller to use the fast block mode to transfer data to and from your hard disk drive.

IDE DMA Transfer Access

This field, by default, is enabled

OnChip Secondary PCI IDE

This field, by default, is enabled

IDE Primary/Secondary Master/Slave PIO

These fields allow your system hard disk controller to work faster. Rather than have the BIOS issue a series of commands that transfer to or from the disk drive, PIO (Programmed Input/Output) allows the BIOS to communicate with the controller and CPU directly.

The system supports five modes, numbered from 0 (default) to 4, which primarily differ in timing. When Auto is selected, the BIOS will select the best available mode.

IDE Primary/Secondary Master/Slave UDMA

These fields allow your system to improve disk I/O throughput to 33Mb/sec with the Ultra DMA/33 feature. The options are *Auto* and *Disabled*.

SATA Mode

The setting choices for the SATA Mode are IDE, RAID and AHCI Mode. Select [IDE] if you want to have SATA function as IDE.

Select [AHCI] for Advanced Host Controller Interface (AHCI) feature, with improved SATA performance with native command queuing & native hot plug. Select [RAID] to use SATA as RAID function. RAID function is supported on the board if it uses ICH10DO. (*MB945 supports 6 x SATA with RAID.*)

LEGACY Mode Support

When the Serial ATA (SATA) is set with the legacy mode enabled, then the SATA is set to the conventional IDE mode. Legacy mode is otherwise known as compatible mode.

PWRON After PWR-Fail

This field sets the system power status whether *on or off* when power returns to the system from a power failure situation.

Onboard FDC Controller

Select *Enabled* if your system has a floppy disk controller (FDC) installed on the motherboard and you wish to use it. If you install an add-in FDC or the system has no floppy drive, select *Disabled* in this field. This option allows you to select the onboard FDD port.

Onboard Serial/Parallel Port

These fields allow you to select the onboard serial and parallel ports and their addresses. The default values for these ports are:

Serial Port 1	3F8/IRQ4
Serial Port 2	2F8/IRQ3
Serial Port 3	Disabled /IRQ11
Serial Port 4	Disabled/IRQ10
Parallel Port	378H/IRQ7

UART Mode Select

This field determines the UART 2 mode in your computer. The default value is *Normal*. Other options include *IrDA* and *ASKIR*.

Parallel Port Mode

This field allows you to determine parallel port mode function.

SPP	Standard Printer Port
EPP	Enhanced Parallel Port
ECP	Extended Capabilities Port
ECP+EPP	Combination of ECP and EPP capabilities
Normal	Normal function

USB 1.0 Controller

The options for this field are *Enabled* and *Disabled*. By default, this field is set to *Enabled*.

USB 2.0 Controller

The options for this field are *Enabled* and *Disabled*. By default, this field is set to *Enabled*. In order to use USB 2.0, necessary OS drivers must be installed first. *Please update your system to Windows 2000 SP4 or Windows XP SP2.*

USB Keyboard/Mouse/Storage Function

The options for this field are *Enabled* and *Disabled*. By default, this field is set to *Enabled*.

Power Management SetupPhoenix - AwardBIOS CMOS Setup Utility
Power Management Setup

PCI Express PM Function	Press Enter	ITEM HELP
ACPI Function	Enabled	Menu Level >
ACPI Suspend	S1(POS)	
Run VGABIOS if S3 Resume	Auto	
Power Management	User Define	
Video Off Method	DPMS	
Video Off In Suspend	Yes	
Suspend Type	Stop Grant	
Modem Use IRQ	3	
Suspend Mode	Disabled	
HDD Power Down	Disabled	
Soft-Off by PWR-BTTN	Instant-Off	
CPU THRM-Throttling	50.0%	
Wake-Up by PCI Card	Disabled	
Power On by Ring	Disabled	
Resume by Alarm	Disabled	
Date (of Month) Alarm	0	
Time (hh:mm:ss) Alarm	0 : 0 : 0	
** Reload Global Timer Events **		
Primary IDE 0	Disabled	
Primary IDE 1	Disabled	
Secondary IDE 0	Disabled	
Secondary IDE 1	Disabled	
FDD, COM, LPT Port	Disabled	
PCI PIRQ[A-D] #	Disabled	
HPET Support	Enabled	
HPET Mode	32-bit mode	

ACPI Function

Enable this function to support ACPI (Advance Configuration and Power Interface).

ACPI Suspend

The default setting of the ACPI Suspend mode is *SI(POS)*.

RUN VGABIOS if S3 Resume

The default setting of this field is *Auto*.

Power Management

This field allows you to select the type of power saving management modes. There are four selections for Power Management.

Min. Power Saving	Minimum power management
Max. Power Saving	Maximum power management.
User Define	Each of the ranges is from 1 min. to 1hr. Except for HDD Power Down which ranges from 1 min. to 15 min.

Video Off Method

This field defines the Video Off features. There are three options.

V/H SYNC + Blank	Blank the screen and turn off vertical and horizontal scanning.
DPMS	Default setting, allows BIOS to control the video display.
Blank Screen	Writes blanks to the video buffer.

Video Off In Suspend

When enabled, the video is off in suspend mode.

Suspend Type

The default setting for the Suspend Type field is *Stop Grant*.

Modem Use IRQ

This field sets the IRQ used by the Modem. By default, the setting is 3.

Suspend Mode

When enabled, and after the set time of system inactivity, all devices except the CPU will be shut off.

HDD Power Down

When enabled, and after the set time of system inactivity, the hard disk drive will be powered down while all other devices remain active.

Soft-Off by PWRBTN

This field defines the power-off mode when using an ATX power supply. The *Instant Off* mode allows powering off immediately upon pressing the power button. In the *Delay 4 Sec* mode, the system powers off when the power button is pressed for more than four seconds or enters the suspend mode when pressed for less than 4 seconds.

CPU THRM-Throttling

When the system enters Doze mode, the CPU clock runs only part of the time. You may select the percent of time that the clock runs.

Wake up by PCI Card

By default, this field is *Disabled*.

Power On by Ring

This field enables or disables the power on of the system through the modem connected to the serial port or LAN.

Resume by Alarm

This field enables or disables the resumption of the system operation. When enabled, the user is allowed to set the *Date* and *Time*.

Reload Global Timer Events

The HDD, FDD, COM, LPT Ports, and PCI PIRQ are I/O events that can prevent the system from entering a power saving mode or can awaken the system from such a mode. When an I/O device wants to gain the attention of the operating system, it signals this by causing an IRQ to occur. When the operating system is ready to respond to the request, it interrupts itself and performs the service.

HPET Support

HPET stands for High Precision Event Timer. HPET can produce periodic interrupts at a much higher resolution than the RTC and is used to synchronize multimedia streams, providing smooth playback and reducing the need to use other timestamp calculations such as an x86 CPU's RDTSC instruction. HPET is not supported in Windows XP, Windows Server 2003, or earlier Windows versions. HPET is supported under Linux and Windows Vista. By default, this field is enabled.

HPET Mode

By default, this field is set to *32-bit mode*.

PNP/PCI Configurations

This option configures the PCI bus system. All PCI bus systems on the system use INT#, thus all installed PCI cards must be set to this value.

Phoenix - AwardBIOS CMOS Setup Utility
PnP/PCI Configurations

PNP OS Installed	No	ITEM HELP
Init Display First	PCI Slot	Menu Level
Reset Configuration Data	Disabled	
Resources Controlled By	Auto (ESCD)	Select Yes if you are using a Plug and Play capable operating system Select No if you need the BIOS to configure non-boot devices
IRQ Resources	Press Enter	
DMA Resources	Press Enter	
PCI/VGA Palette Snoop	Disabled	
PCI Express relative items		
Maximum Payload Size	128	

PNP OS Install

Enable the PNP OS Install option if it is supported by the operating system installed. The default value is *No*.

Init Display First

The default setting is *PCI Card*.

Reset Configuration Data

The default value is *Disabled*.

Resources Controlled by

This PnP BIOS can configure all of the boot and compatible devices with the use of a PnP operating system such as Windows 95.

PCI/VGA Palette Snoop

Some non-standard VGA display cards may not show colors properly. This field allows you to set whether or not MPEG ISA/VESA VGA cards can work with PCI/VGA. When this field is enabled, a PCI/VGA can work with an MPEG ISA/VESA VGA card. When this field is disabled, a PCI/VGA cannot work with an MPEG ISA/VESA card.

Maximum Payload Size

The default setting of the PCI Express Maximum Payload Size is 128.

PC Health StatusPhoenix - AwardBIOS CMOS Setup Utility
PC Health Status

		ITEM HELP
Shutdown Temperature	Disabled	Menu Level >
CPU Warning Temperature	Disabled	
System Temp.	32°C/89°F	
CPU Temp.	39°C/102°F	
System Fan Speed	0 RPM	
CPU Fan Speed	4440 RPM	
Vcore	1.31 V	
+12 V	12.19 V	
Vmem	1.90 V	
+5 V	5.14 V	
3.3 V	3.32 V	
VBAT (V)	3.21 V	
3.3VSB(V)	3.35 V	
** Smart FAN III **		
CPU Smart Fan Temperature	Disabled	

CPU Warning Temperature

This field allows the user to set the temperature so that when the temperature is reached, the system sounds a warning. This function can help prevent damage to the system that is caused by overheating.

Shutdown Temperature

This field allows the user to set the temperature by which the system automatically shuts down once the threshold temperature is reached. This function can help prevent damage to the system that is caused by overheating.

Temperatures/Fan Speeds/Voltages

These fields are the parameters of the hardware monitoring function feature of the board. The values are read-only values as monitored by the system and show the PC health status.

Frequency/Voltage Control

Phoenix - AwardBIOS CMOS Setup Utility
Frequency/Voltage Control

Auto Detect PCI Clk	Disabled	ITEM HELP
Spread Spectrum	Disabled	Menu Level >
CPU Host/SRC/PCI Clock	Default	

Auto Detect PCI Clk

This field enables or disables the auto detection of the PCI clock.

Spread Spectrum

This field sets the value of the spread spectrum. The default setting is *Disabled*. This field is for CE testing use only.

CPU Host/SRC/PCI Clock

This field is set as *Default*.

Load Fail-Safe Defaults

This option allows you to load the troubleshooting default values permanently stored in the BIOS ROM. These default settings are non-optimal and disable all high-performance features.

Load Optimized Defaults

This option allows you to load the default values to your system configuration. These default settings are optimal and enable all high performance features.

Set Supervisor/User Password

These two options set the system password. Supervisor Password sets a password that will be used to protect the system and Setup utility. User Password sets a password that will be used exclusively on the system. To specify a password, highlight the type you want and press <Enter>. The Enter Password: message prompts on the screen. Type the password, up to eight characters in length, and press <Enter>. The system confirms your password by asking you to type it again. After setting a password, the screen automatically returns to the main screen.

To disable a password, just press the <Enter> key when you are prompted to enter the password. A message will confirm the password to be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

Save & Exit Setup

This option allows you to determine whether or not to accept the modifications. If you type “Y”, you will quit the setup utility and save all changes into the CMOS memory. If you type “N”, you will return to Setup utility.

Exit Without Saving

Select this option to exit the Setup utility without saving the changes you have made in this session. Typing “Y” will quit the Setup utility without saving the modifications. Typing “N” will return you to Setup utility.

Drivers Installation

This section describes the installation procedures for software and drivers under the Windows 2000, Windows XP and Windows Vista. The software and drivers are included with the board. If you find the items missing, please contact the vendor where you made the purchase. The contents of this section include the following:

Intel Chipset Software Installation Utility	50
Intel Graphics Driver Installation	52
Realtek HD Codec Audio Driver Installation	54
LAN Drivers Installation	56
Intel Matrix Storage Manager Driver	58
Intel Management Engine Interface	60
Intel Active Management Technology	62

IMPORTANT NOTE:

After installing your Windows operating system (Windows 2000/XP/Vista), you must install first the Intel Chipset Software Installation Utility before proceeding with the drivers installation.


Intel Chipset Software Installation Utility

The Intel® Chipset Drivers should be installed first before the software drivers to enable Plug & Play INF support for Intel chipset components. Follow the instructions below to complete the installation under Windows 2000/XP/Vista. (Before installing this utility, please update your system to Windows 2000 SP4 or Windows XP SP2)

1. Insert the drivers DVD into the DVD drive. Click **Intel** and then **Intel(R) Q45 Chipset Drivers**. Click **Intel(R) Chipset Software Installation Utility**.



2. When the Welcome screen appears, click *Next* to continue. Click *Yes* to accept the software license agreement and proceed with the installation process.
3. On the Readme Information screen, click *Next* to continue. When the Setup Progress screen appears, click *Next* to continue.

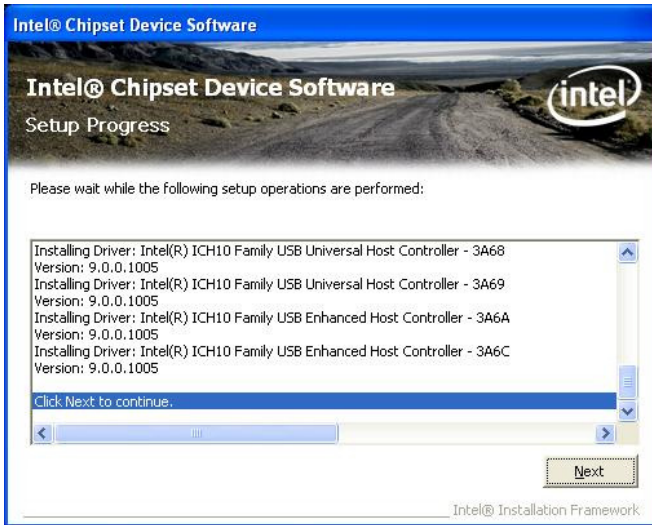


4. Setup process is now complete. Click *Finish* to restart the computer.



Intel Graphics Driver Installation


To install the Graphics drivers, follow the steps below to proceed with the installation.

1. Insert the drivers DVD into the DVD drive. Click **Intel** and then **Intel(R) Q45 Chipset Drivers**. Click **Intel(R) Q45 Chipset Family Graphics Driver**.

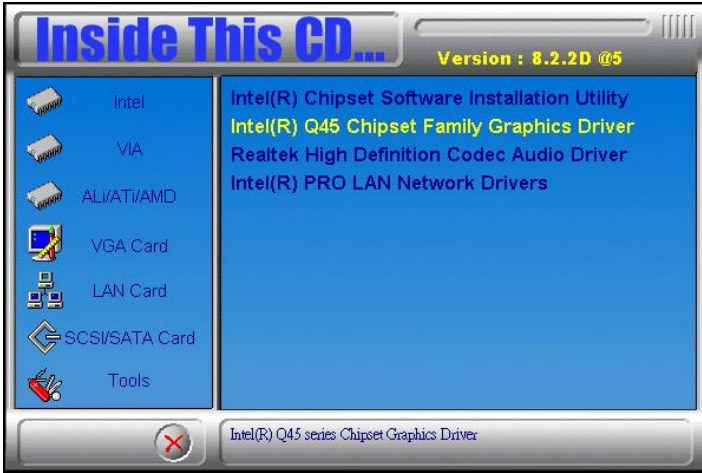

2. When the Welcome screen appears, click **Next** to continue. Click **Yes** to accept the software license agreement and proceed with the installation process.
3. On the Readme Information screen, click **Next** to continue.

4. When the Setup Progress screen appears, click *Next* to continue.

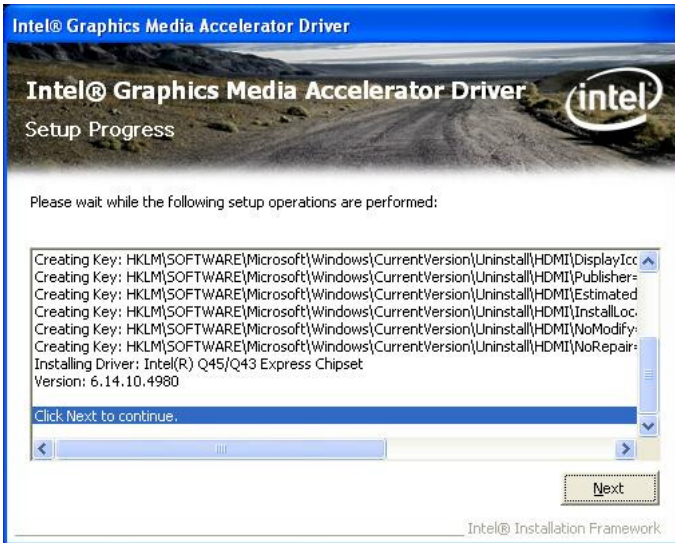

5. Setup is complete. Click *Finish* to restart the computer.




Realtek HD Codec Audio Driver Installation

Follow the steps below to install the Realtek High Definition Codec Audio Driver.


1. Insert the drivers DVD into the DVD drive. Click **Intel** and then **Intel(R) Q45 Chipset Drivers**. Click **Realtek High Definition Codec Audio Driver**.



2. When the Welcome screen appears, click *Next* to continue.

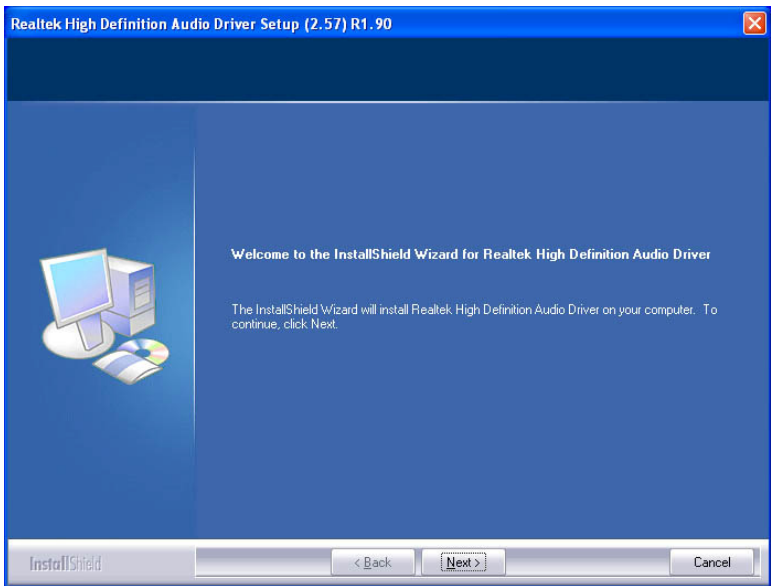

3. InstallShield Wizard is complete. Click *Finish* to restart the computer.

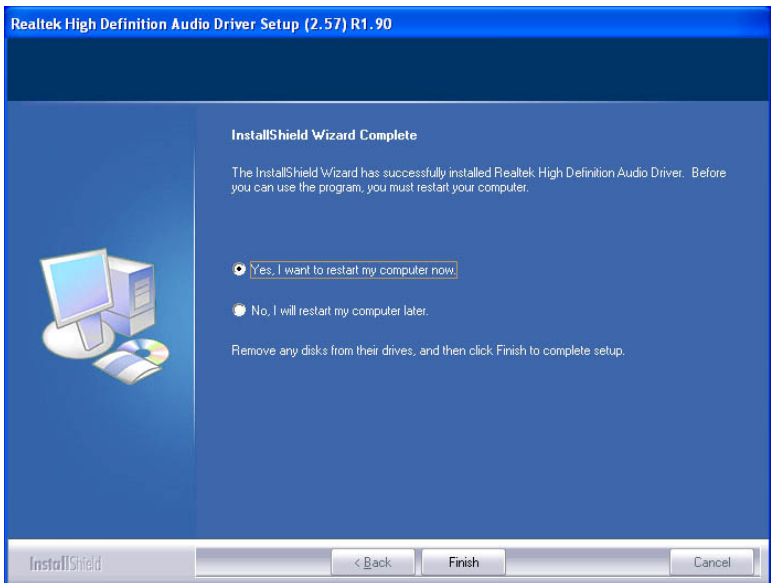

LAN Drivers Installation

Follow the steps below to start installing the Intel PRO LAN drivers.


1. Insert the drivers DVD into the DVD drive. Click *Intel* and then *Intel(R) Q45 Chipset Drivers*. Click *Intel(R) PRO LAN Network Drivers*.




2. When the Welcome screen appears, click *Next* to continue. Click *Yes* to accept the software license agreement and proceed with the process.



3. On the Setup Options screen, the checkbox for Drivers should be checked. Now, click *Next* to continue.

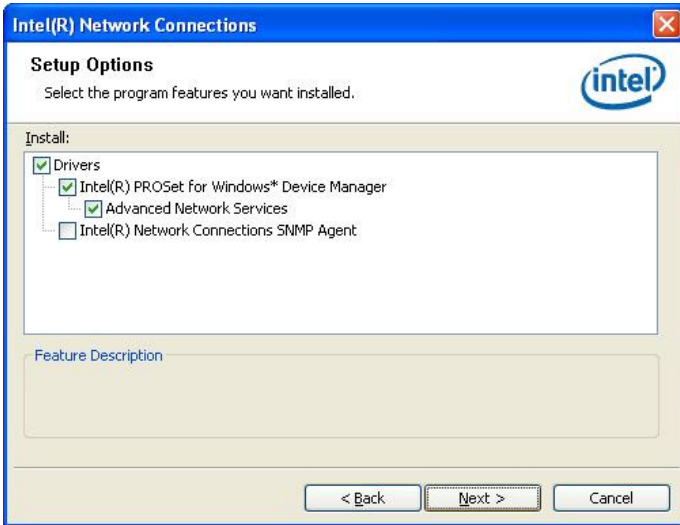

4. The wizard is ready to begin installation. Now, click *Install* to continue.

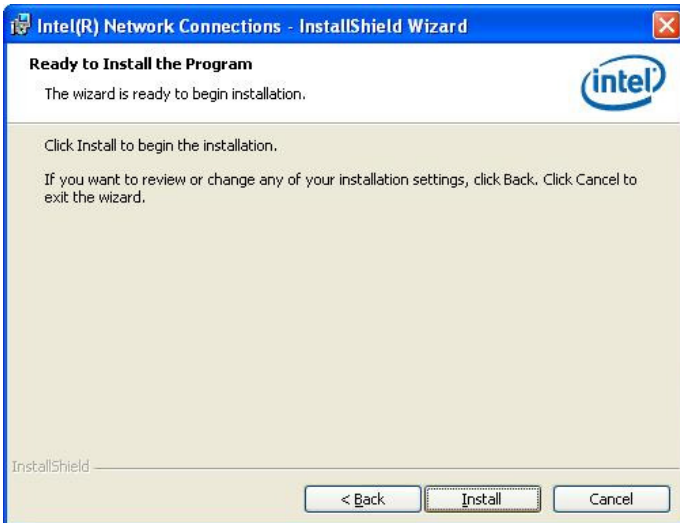

5. InstallShield wizard is complete. Click *Finish*.

Intel Matrix Storage Manager Driver

This driver is needed to be installed when the board supports SATA AHCI or SATA RAID.

1. Insert the drivers DVD in the DVD drive. Click *Intel* and then *Intel(R) Q45 Chipset Drivers*. Click *Intel(R) Matrix Storage Manager Drivers*.




2. In the welcome screen to the Setup Program, click *Next*. In the next “warning” page as below, click *Next*.



3. In the License Agreement page, click *Yes* to agreement with the agreement. Then , in the Readme File Information page, click *Next*.

4. In the Setup Progress page, click *Next*, and restart the computer when prompted.

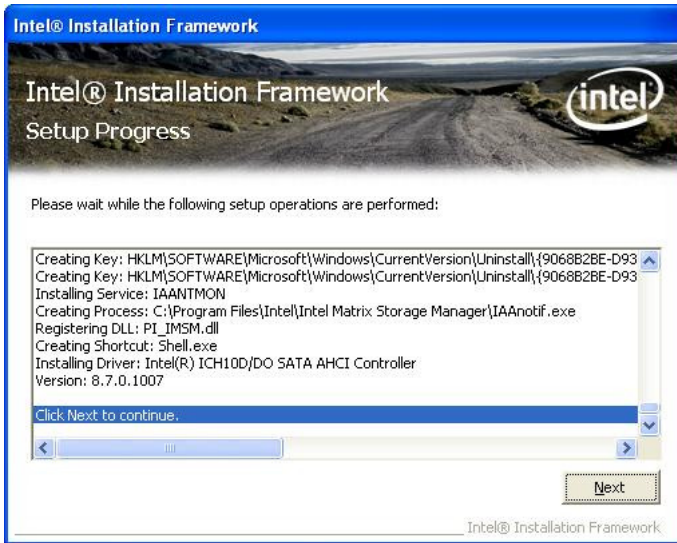

Intel Management Engine Interface

This driver is used only on MB945AF (with iAMT function).

1. Insert the drivers DVD into the DVD drive. Click *Intel* and then *Intel(R) Q45 Chipset Drivers*. Click *Intel(R) IAMT*.




2. In the next page, click *Intel(R) MEI Driver*.



3. In the welcome screen to the Setup Program, click *Next*. In the next License Agreement page, click *Yes* to accept to all the terms with the agreement and continue the setup program.

4. Click **Yes** in the Readme File Information page and continue the setup program. Setup is now in progress. Click **Next**.

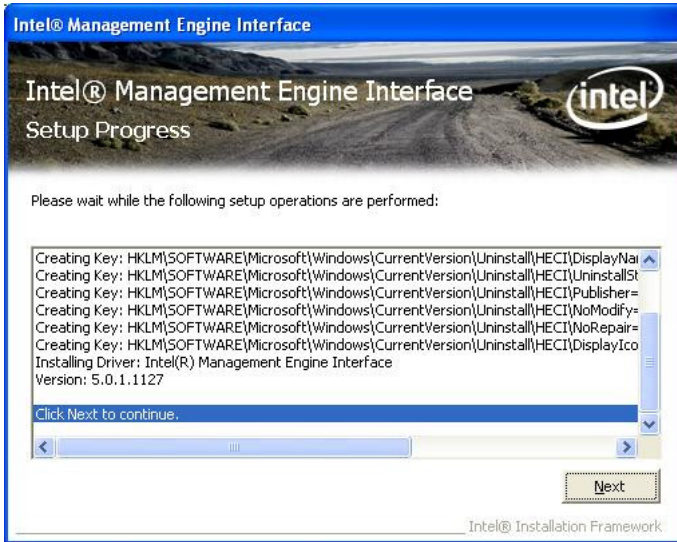

5. Setup is complete. Click **Finish**.



Intel Active Management Technology

This driver is used only on MB945AF (with iAMT function). It will first install the update for “Hotfix for Windows XP (KB942288-v3)” and Microsoft .NET Frame 3.5 SP1 Setup.

1. Insert the drivers DVD into the DVD drive. Click *Intel* and then *Intel(R) Q45 Chipset Drivers*. Click *Intel(R) IAMT*, then *Intel(R) SOL/LSM Driver*.



2. In the welcome screen to the Setup Program, click *Next* to continue. In the License Agreement screen, click *Yes* accept the terms of the agreement and proceed with the setup program.


3. In the Readme File Information screen, click *Next* to continue.

4. The next screen is for the Software Update Installation Wizard. It will install the update for “Hotfix for Windows XP (KB942288-v3). Click *Next* to continue.


5. In the License Agreement screen, click *Next* to agree with the Microsoft Software License Terms.

6. Setup is complete. Click *Finish*.


7. The next screen will show the setup welcome screen to the Microsoft .NET Frame 3.5 SP1 Setup. Follow the instructions accordingly to finish the setup process. In this screen, check the checkbox for “I have read and ACCEPT the terms of the License Agreement”, and then click *Install*.

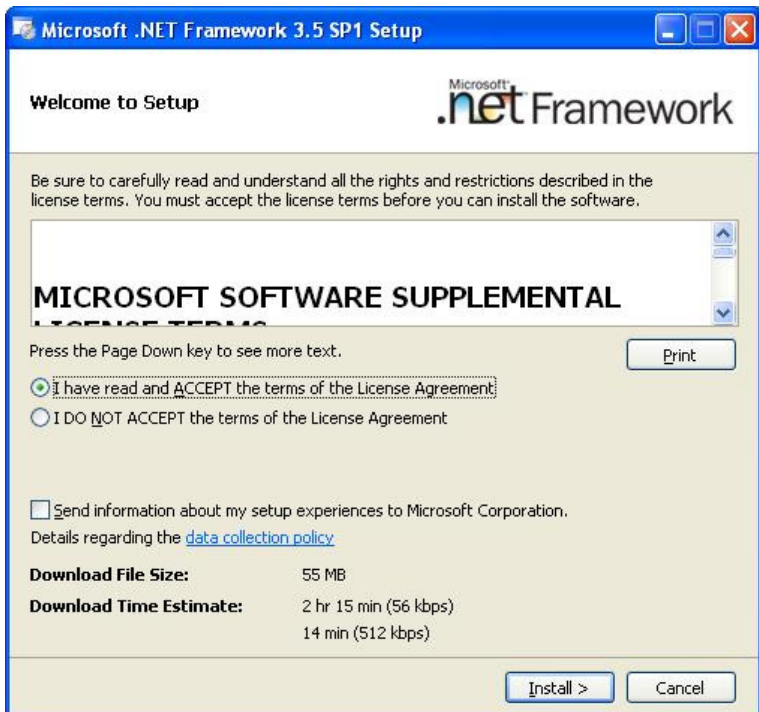

8. After Setup is complete, click *Exit*.

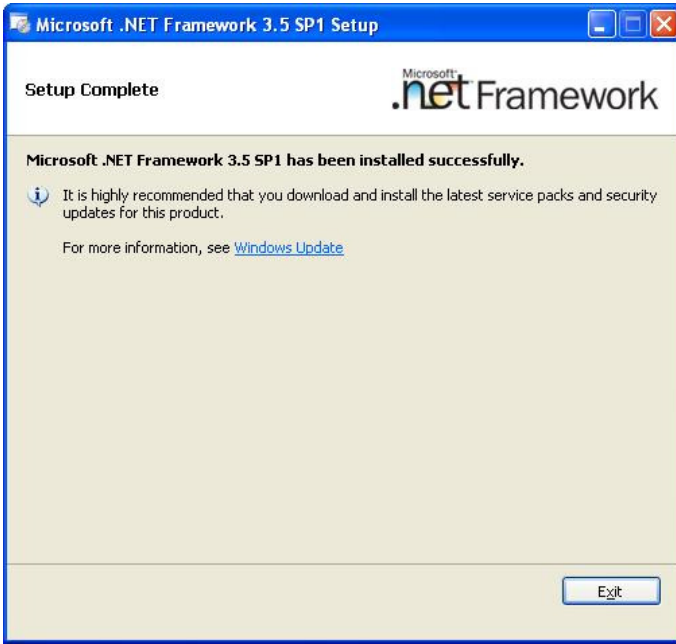

9. Once the Microsoft .NET Frame 3.5 SP1 Setup is complete, the next screen shows the Intel Active Management Technology Setup Progress. Click **Next** to continue.

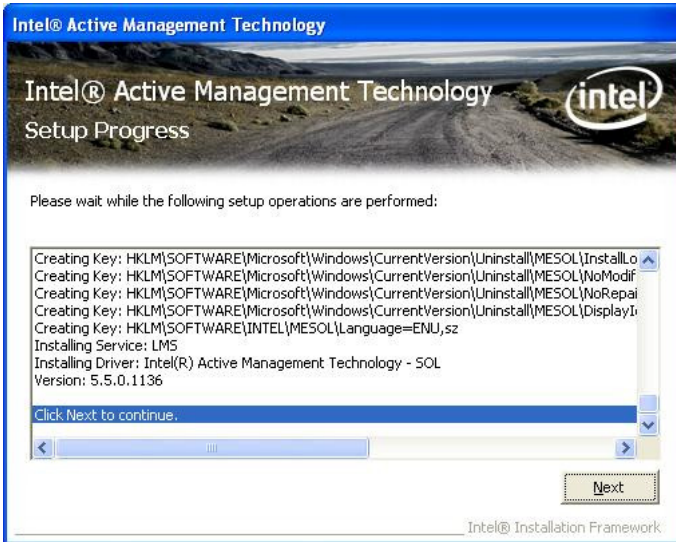

10. The Intel Active Management Technology Setup is now complete. Click **Finish** to complete the setup process.



This page is intentionally left blank.

Appendix

A. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses that also becomes the identity of the device. The following table lists the I/O port addresses used.

Address	Device Description
000h - 01Fh	DMA Controller #1
020h - 03Fh	Interrupt Controller #1
040h - 05Fh	Timer
060h - 06Fh	Keyboard Controller
070h - 07Fh	Real Time Clock, NMI
080h - 09Fh	DMA Page Register
0A0h - 0BFh	Interrupt Controller #2
0C0h - 0DFh	DMA Controller #2
0F0h	Clear Math Coprocessor Busy Signal
0F1h	Reset Math Coprocessor
1F0h - 1F7h	IDE Interface
278h - 27Fh	Parallel Port #2(LPT2)
2F8h - 2FFh	Serial Port #2(COM2)
2B0h - 2DFh	Graphics adapter Controller
378h - 3FFh	Parallel Port #1(LPT1)
360h - 36Fh	Network Ports
3B0h - 3BFh	Monochrome & Printer adapter
3C0h - 3CFh	EGA adapter
3D0h - 3DFh	CGA adapter
3F0h - 3F7h	Floppy Disk Controller
3F8h - 3FFh	Serial Port #1(COM1)

B. Interrupt Request Lines (IRQ)

Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on board.

Level	Function
IRQ0	System Timer Output
IRQ1	Keyboard
IRQ2	Interrupt Cascade
IRQ3	Serial Port #2
IRQ4	Serial Port #1
IRQ5	Reserved
IRQ6	Floppy Disk Controller
IRQ7	Parallel Port #1
IRQ8	Real Time Clock
IRQ9	Reserved
IRQ10	Reserved
IRQ11	Reserved
IRQ12	PS/2 Mouse
IRQ13	80287
IRQ14	Primary IDE
IRQ15	Secondary IDE

C. Watchdog Timer Configuration

The WDT is used to generate a variety of output signals after a user programmable count. The WDT is suitable for use in the prevention of system lock-up, such as when software becomes trapped in a deadlock. Under these sorts of circumstances, the timer will count to zero and the selected outputs will be driven. Under normal circumstance, the user will restart the WDT at regular intervals before the timer counts to zero.

SAMPLE CODE:

```
//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include <dos.h>
#include <conio.h>
#include <stdio.h>
#include <stdlib.h>
#include "W627DHG.H"
//-----
int main (void);

void WDTInitial(void);
void WDTEnable(unsigned char);
void WDTDisable(void);

//-----
int main (void)
{
    char SIO;

    SIO = Init_W627DHG();
    if (SIO == 0)
    {
        printf("Can not detect Winbond 83627DHG, program
abort.\n");
        return(1);
    }

    WDTInitial();

    WDTEnable(10);

    WDTDisable();

    return 0;
}
//-----
void WDTInitial(void)
{
    unsigned char bBuf;

    bBuf = Get_W627DHG_Reg(0x2D);
    bBuf &= (~0x01);
    Set_W627DHG_Reg(0x2D, bBuf); //Enable WDIO
}
//-----
void WDTEnable(unsigned char NewInterval)
{
    unsigned char bBuf;
```

APPENDIX

```
Set_W627DHG_LD(0x08);
Set_W627DHG_Reg(0x30, 0x01); //enable timer

bBuf = Get_W627DHG_Reg(0xF5);
bBuf &= (~0x08);
Set_W627DHG_Reg(0xF5, bBuf); //count mode is second

Set_W627DHG_Reg(0xF6, NewInterval);
//set timer
}
//-----
void WDTDisable(void)
{
    Set_W627DHG_LD(0x08);
    Set_W627DHG_Reg(0xF6, 0x00); //clear
watchdog timer
    Set_W627DHG_Reg(0x30, 0x00); //watchdog
disabled
}
//-----

//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#ifndef __W627DHG_H
#define __W627DHG_H 1
//-----
#define W627DHG_INDEX_PORT (W627DHG_BASE)
#define W627DHG_DATA_PORT (W627DHG_BASE+1)
//-----
#define W627DHG_REG_LD 0x07
//-----
#define W627DHG_UNLOCK 0x87
#define W627DHG_LOCK 0xAA
//-----
unsigned int Init_W627DHG(void);
void Set_W627DHG_LD( unsigned char);
void Set_W627DHG_Reg( unsigned char, unsigned char);
unsigned char Get_W627DHG_Reg( unsigned char);
//-----
#endif // __W627DHG_H

//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include "W627DHG.H"
#include <dos.h>
//-----
unsigned int W627DHG_BASE;
void Unlock_W627DHG (void);
void Lock_W627DHG (void);
//-----
unsigned int Init_W627DHG(void)
{
    unsigned int result;
    unsigned char ucDid;

    W627DHG_BASE = 0x4E;
    result = W627DHG_BASE;
```

```

ucDid = Get_W627DHG_Reg(0x20);
if (ucDid == 0xA0)
{   goto Init_Finish;           }
else if (ucDid == 0xB0)           //W83627DHG-P??
{   goto Init_Finish;           }

W627DHG_BASE = 0x2E;
result = W627DHG_BASE;

ucDid = Get_W627DHG_Reg(0x20);
if (ucDid == 0xA0)
{   goto Init_Finish;           }
else if (ucDid == 0xB0)           //W83627DHG-P??
{   goto Init_Finish;           }

W627DHG_BASE = 0x00;
result = W627DHG_BASE;

Init_Finish:
    return (result);
}
//-----
void Unlock_W627DHG (void)
{
    outportb(W627DHG_INDEX_PORT, W627DHG_UNLOCK);
    outportb(W627DHG_INDEX_PORT, W627DHG_UNLOCK);
}
//-----
void Lock_W627DHG (void)
{
    outportb(W627DHG_INDEX_PORT, W627DHG_LOCK);
}
//-----
void Set_W627DHG_LD( unsigned char LD)
{
    Unlock_W627DHG();
    outportb(W627DHG_INDEX_PORT, W627DHG_REG_LD);
    outportb(W627DHG_DATA_PORT, LD);
    Lock_W627DHG();
}
//-----
void Set_W627DHG_Reg( unsigned char REG, unsigned char DATA)
{
    Unlock_W627DHG();
    outportb(W627DHG_INDEX_PORT, REG);
    outportb(W627DHG_DATA_PORT, DATA);
    Lock_W627DHG();
}
//-----
unsigned char Get_W627DHG_Reg(unsigned char REG)
{
    unsigned char Result;
    Unlock_W627DHG();
    outportb(W627DHG_INDEX_PORT, REG);
    Result = inportb(W627DHG_DATA_PORT);
    Lock_W627DHG();
    return Result;
}
//-----

```

This page is intentionally left blank.